

more ...

NF18MESH

Quick Start Guide

 
Fixed Wireless Connections




What's in the box




1 x NF18MESH
CloudMesh Gateway

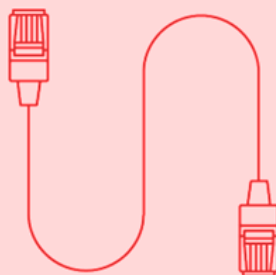


1 x RJ45
Ethernet Cable

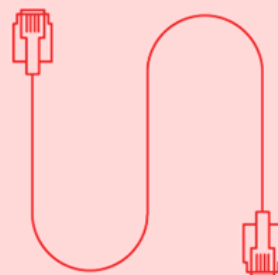 

1 x RJ11
Telephone Cable

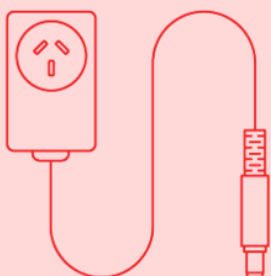 

1 x Power Supply
(12V/2A)

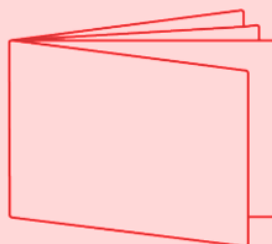 

1 x Quick Start Guide



1 x Warranty Card
1x End User License Agreement

more 



safety information

Please Read Before Use



Location

The gateway is designed for indoor use only.
Place the gateway in a central location for the best WiFi performance.



Airflow

- Do not restrict airflow around the gateway.
- The gateway is air cooled and may overheat where airflow has been restricted.
- Always allow minimum clearance of 5cm around all sides and the top of the gateway.
- The gateway may become warm during normal use. Do not cover, do not put in an enclosed space, do not put under or behind large items of furniture.



Environment

- Do not place the gateway in direct sunlight or any hot areas.
- Safe operating temperature of the gateway is between 0° and 40°C
- Do not allow the gateway to come in contact with any liquid or moisture.
- Do not place the gateway in any wet or humid areas such as kitchen, bathroom or laundry rooms.



Power Supply

Always use only the power supply unit that came with the gateway. You should immediately stop using the power supply unit if the cable or power supply unit is damaged.



Service

There are no user-serviceable components in the gateway. Do not attempt to disassemble, repair, or modify the gateway.



Small Children

Do not leave the gateway and its accessories within the reach of small children or allow them to play with it. The gateway contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.



RF Exposure

The gateway contains a transmitter and a receiver. When it is on, it receives and transmits RF energy. The gateway conforms with the radio frequency (RF) exposure limits adopted by the Australian Communications and Media Authority Radiocommunications (Electromagnetic Radiation - Human Exposure) Standard 2014, when used at a distance of not less than 20 cm from the body.)



Product Handling

- Always treat the gateway and its accessories with care and keep it in a clean and dust-free place.
- Do not expose the gateway or its accessories to open flames.
- Do not drop, throw or try to bend the gateway or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the gateway or its accessories.
- Please check local regulations for disposal of electronic products.
- Arrange power and Ethernet cables in a manner such that they are not likely to be stepped on or have items placed on them.

Getting Started



Pre-configured?

If you received the Netcomm NF18MESH modem from More, the device will be pre-configured. Follow the steps specific to your Fixed Wireless NBN connection on the following pages to get connected.

more 

 
How to connect your Netcomm modem:

Fixed Wireless Connections

Getting Started

Step 1

Locate the NBN Connection Box that has been installed inside your property.

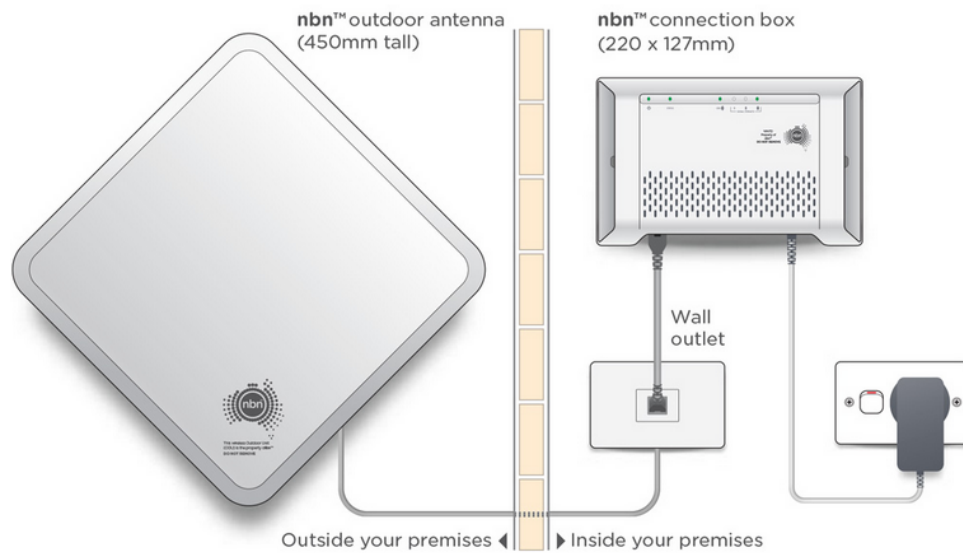

Step 2

 
Ensure that the power cable is securely in place and that the POWER, STATUS and ODU lights are on and solid green. You should see at least one signal strength light on (this may be flashing).



If the STATUS or ODU lights are off or showing red, please contact our technical support team.

Step 3

Now look on the underside of the NBN Connection Box where you can see the Uni-D ports surrounded by yellow.

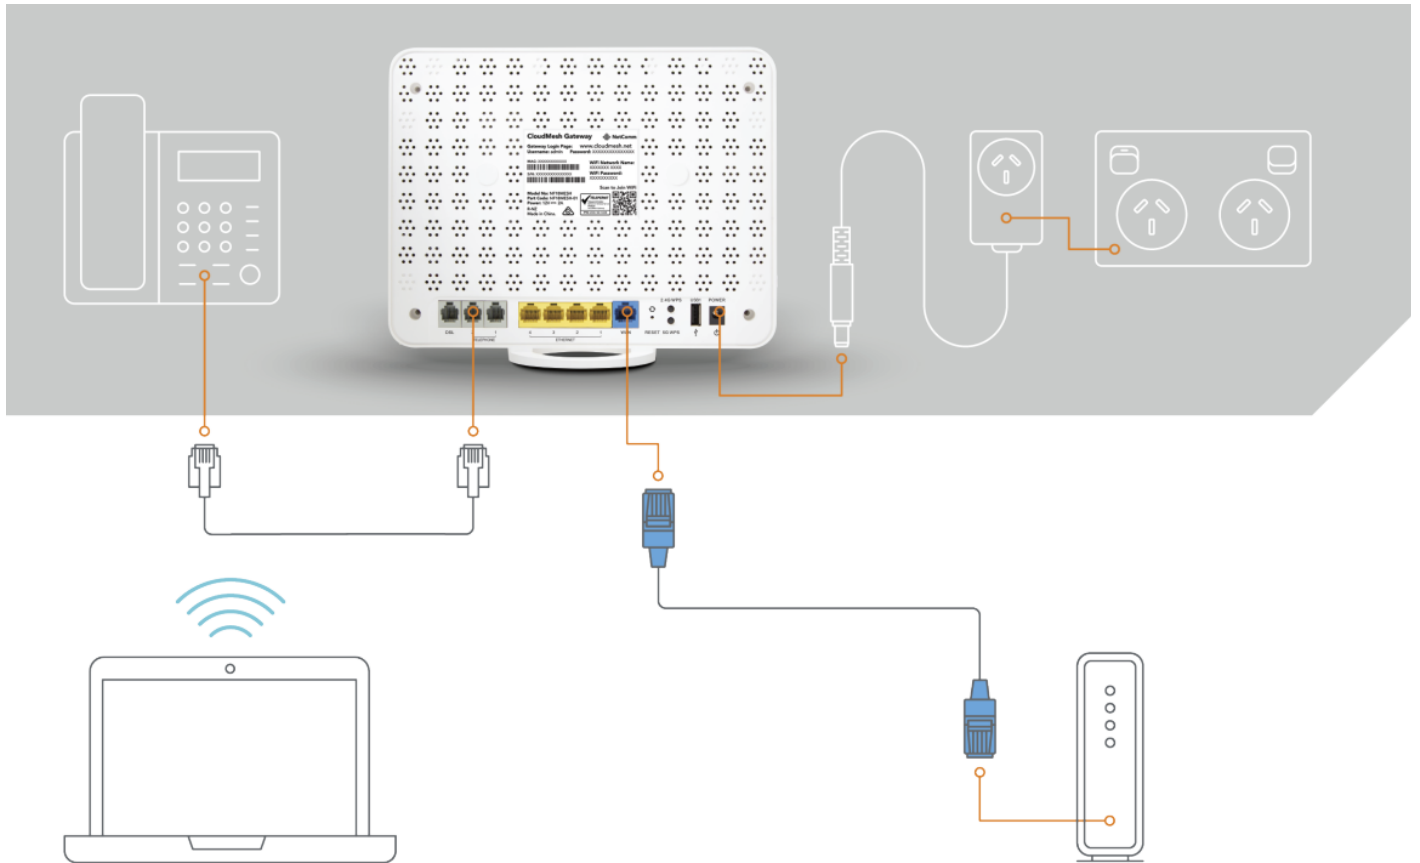

Using an ethernet network cable, connect your modem from its WAN port to the blue WAN port on your NetComm modem. We generally activate the next available Uni-D port – starting with Uni-D 1. We will detail your Uni-D port number in our emails to you.

Step 5 - Check lights

After you have successfully connected your modem please wait a couple of minutes for it to connect to the network.

Once connected to the network, the Power, WAN & WiFi 2.4 – 5 lights will display a steady green light. The internet light will be flashing.



Troubleshooting tips

If the DSL light on the NBN NCD device does not come on does not stop flashing:

1. Try connecting the modem to an alternative telephone wall socket in the property.
2. Try an alternative telephone cord to connect the NDC to the wall socket.
3. Ensure that all other devices are disconnected from your telephone sockets in the property. This includes phones, fax machines, filters, splitters and extension cords.

If the lights on the modem aren't on, ensure you have waited up to an hour from the time of connecting the NDC and router. It can take this long for the activation to complete

If the modem is still not connected, please contact our technical support team for further assistance:

Technical Support

1800 733 368

7am – Midnight (Weekdays) AET

8am – 8pm (Weekends) AET

Overseas: [+61390219630](tel:+61390219630)

WhatsApp: [+61480096696](tel:+61480096696)

Final steps

After you've completed the steps to connect your NetComm NF18MESH modem, wait up to 20 mins to connect to your devices. Once connected, run a test to check the speed of your connection at www.speedtest.net

more 

How to connect a NF18MESH modem

That is not pre-configured

Before You Begin

Ensure that you have the following information on hand

- How your **INTERNET SERVICE** will physically connect to the gateway, see below.
- The **SETTINGS** specific to your type of service.

These are two ways to connect the gateway to the Internet service:

Ethernet WAN

 
This is the most common access type in Australia and New Zealand and covers fixed line technologies such as **nbn™ FTTB, HFC, FTTC** as well as **nbn™ Fixed Wireless** and **Sky Master satellite** services.

This type of Internet service uses the **blue WAN** port on the back of the gateway to connect to the dedicated connection box installed by your access network provider.


ADSL or VDSL

These access types are provided by **nbn™ FTTB, FTTN** or **ADSL/VDSL** over a traditional telephone line.

This connection uses the **grey DSL** port of the back of the gateway.

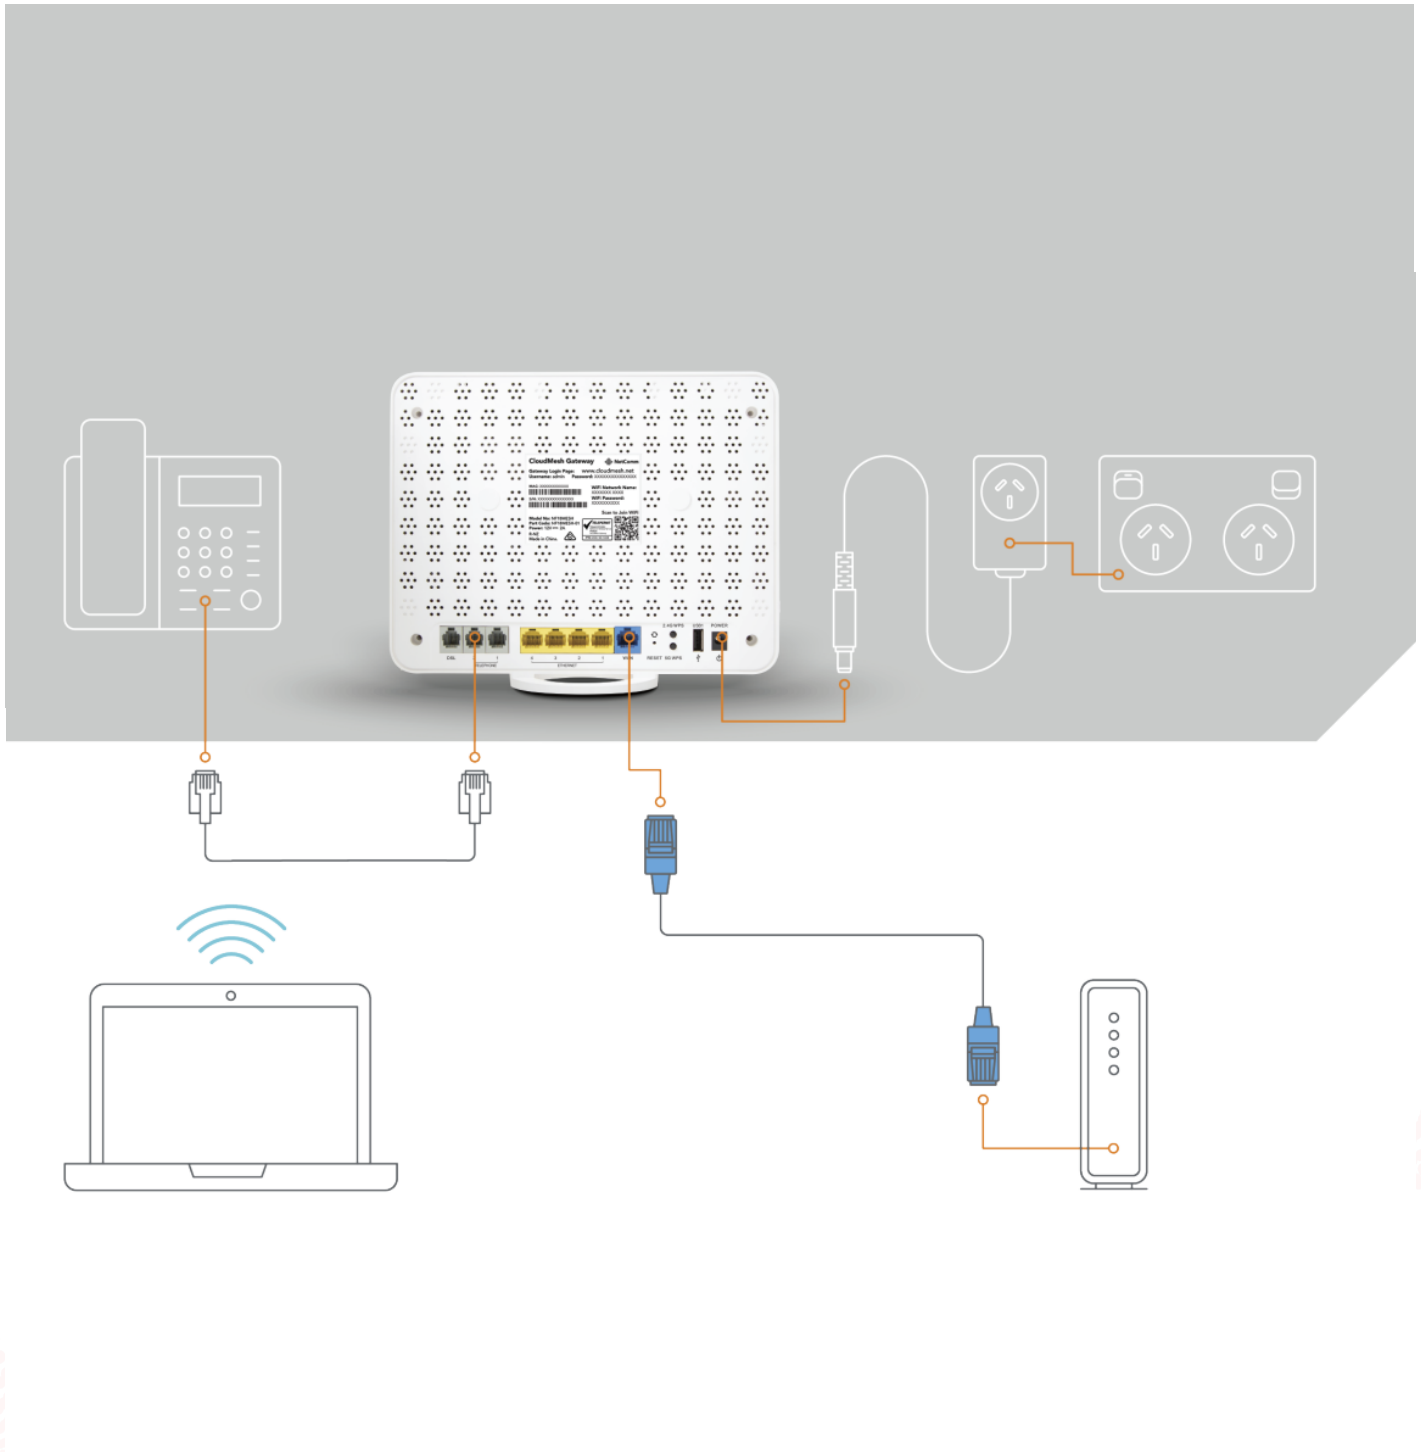

Logging in to the web interface

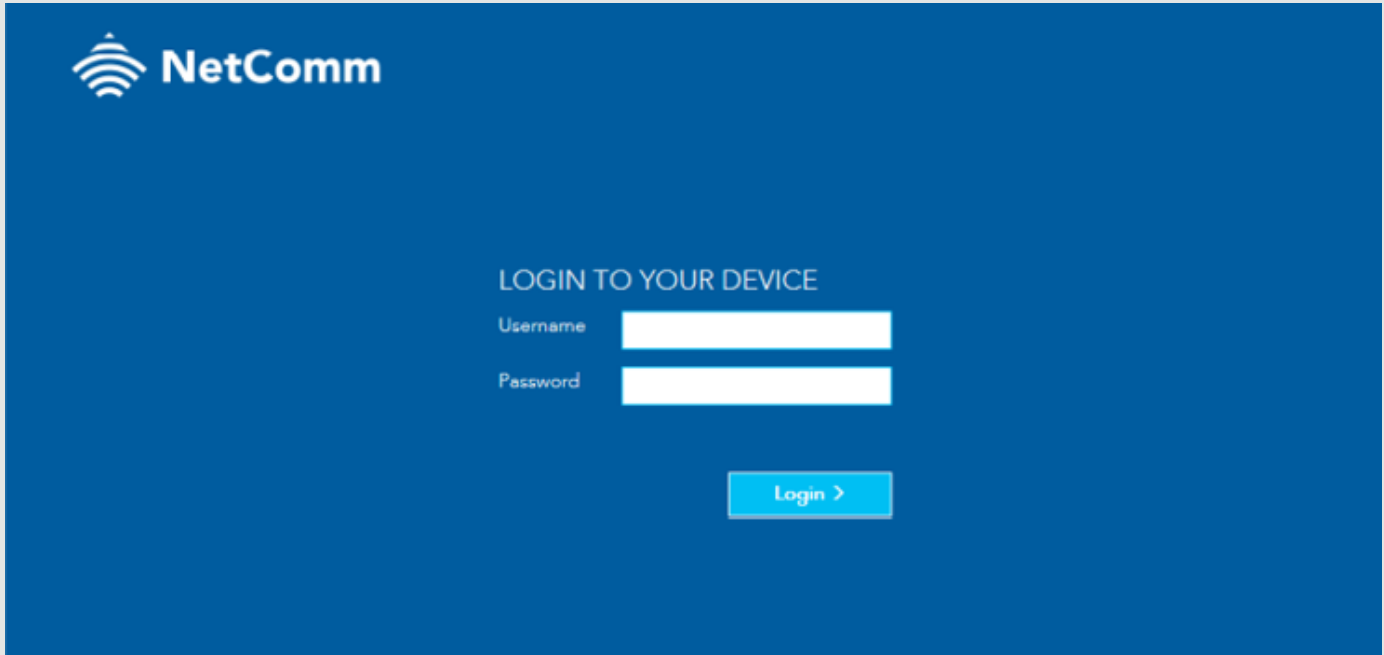The image shows the NetComm login interface. It has a blue background with the NetComm logo in the top left corner. In the center, there is a section titled "LOGIN TO YOUR DEVICE". Below this title are two input fields: "Username" and "Password". Below the "Password" field is a blue button with the text "Login >".

NetComm

LOGIN TO YOUR DEVICE

Username

Password

Login >

1. Complete a factory reset of the modem

2. Open web browser

(such as Mozilla Firefox or Google Chrome), type <http://cloudmesh.net> into the address bar and press **Enter**.

 
If you encounter difficulties connecting, type <http://192.168.20.1> and press **Enter**.

3. At the login screen

Type **admin** into the **Username** field. In the **Password** field, enter the password printed on the gateway label (affixed to the back panel of the gateway) then click the **Login >** button.

Note - The graphics that appear in the section represent the display from a Windows browser. The same graphics will display differently when viewed on a hand held device.

Using The First-Time Setup Wizard

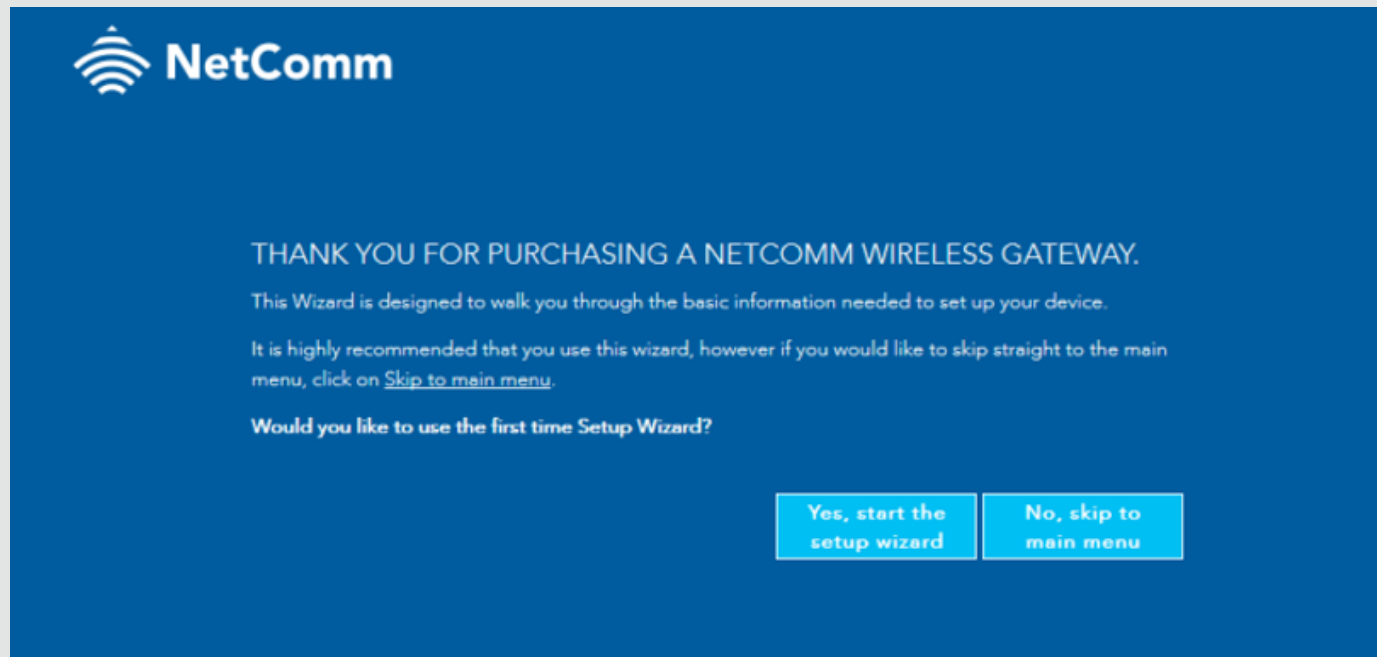


Upon first login

The gateway displays the first-time setup wizard.

We recommend using the wizard to configure your Internet connection.

Click the **Yes, start the setup wizard** button.

Using The First-Time Setup Wizard Ethernet WAN

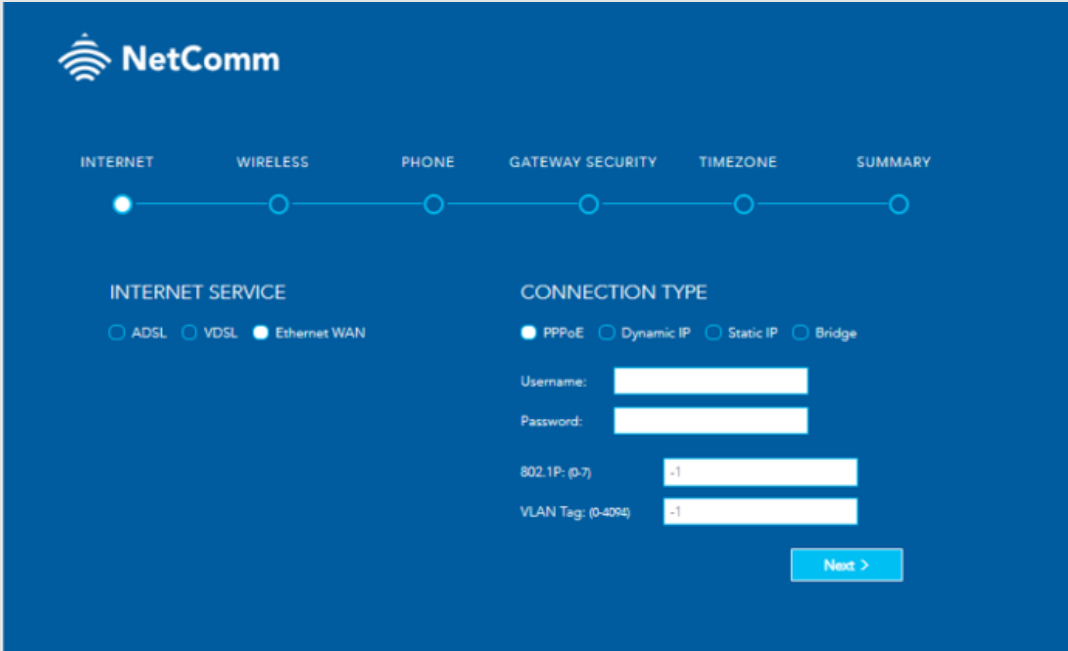

The image shows the NetComm First-Time Setup Wizard interface. At the top, the NetComm logo is displayed. Below it, a progress bar shows six steps: INTERNET, WIRELESS, PHONE, GATEWAY SECURITY, TIMEZONE, and SUMMARY. The INTERNET step is currently selected and highlighted. The main content area is divided into two sections: INTERNET SERVICE and CONNECTION TYPE. Under INTERNET SERVICE, there are three radio buttons: ADSL, VDSL, and Ethernet WAN. Under CONNECTION TYPE, there are four radio buttons: PPPoE, Dynamic IP, Static IP, and Bridge. Below these, there are input fields for Username, Password, 802.1P: (0-7), and VLAN Tag: (0-4094). A 'Next >' button is located at the bottom right of the form.

NetComm

INTERNET WIRELESS PHONE GATEWAY SECURITY TIMEZONE SUMMARY

INTERNET SERVICE

ADSL VDSL Ethernet WAN

CONNECTION TYPE

PPPoE Dynamic IP Static IP Bridge

Username:

Password:

802.1P: (0-7)

VLAN Tag: (0-4094)

Next >

1. Under Internet Services

select **Ethernet WAN**.


2. Under Connection Type

select **PPPoE**.

3. Enter the details

Enter the details required for your specific **Connection Type**.

Using The First-Time Setup Wizard Ethernet WAN

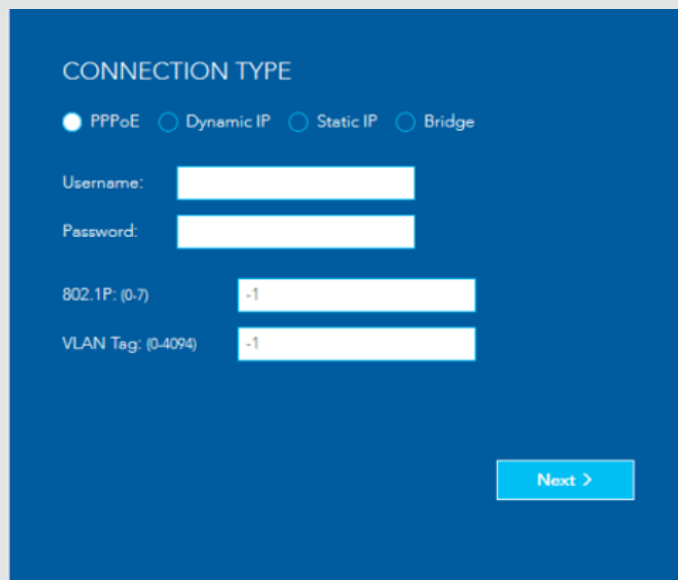

CONNECTION TYPE

☒ PPPoE ☐ Dynamic IP ☐ Static IP ☐ Bridge

Username:


Password:

802.1P: (0-7)

VLAN Tag: (0-4094)

Next >

OR

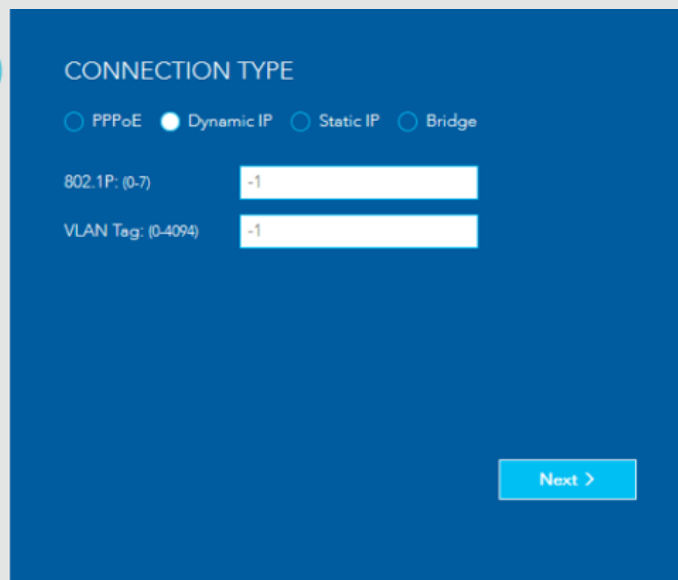

CONNECTION TYPE

☐ PPPoE ☒ Dynamic IP ☐ Static IP ☐ Bridge

802.1P: (0-7)

VLAN Tag: (0-4094)

Next >

PPPoE

Enter the username and password, 802.1P priority and VLAN Tag provided in your connection email from More.

When you have finished, click the Next > button to go to the WIRELESS settings

Dynamic IP

Enter the 802.1P priority and VLAN Tag provided in your connection email from More.

When you have finished, click the Next > button to go to the WIRELESS settings

Using The First-Time Setup Wizard Ethernet WAN

OR

CONNECTION TYPE

☐ PPPoE ☐ Dynamic IP ☒ Static IP ☐ Bridge

WAN IP Address:

WAN Subnet Mask:

WAN Gateway IP Address:

Primary DNS server:

Secondary DNS server:

802.1P: (0-7)

VLAN Tag: (0-4094)

Next >

OR

CONNECTION TYPE

☐ PPPoE ☐ Dynamic IP ☐ Static IP ☒ Bridge

802.1P: (0-7)

VLAN Tag: (0-4094)

Next >

Static IP

Enter the WAN IP Address, WAN Subnet Mask, WAN Gateway IP Address, Primary DNS Server and Secondary DNS server, 802.1P priority and VLAN Tag provided in your connection email from More.


When you have finished, click the Next > button to go to the WIRELESS settings

Bridge

Enter the 802.1P priority and VLAN Tag provided in your connection email from More.

When you have finished, click the Next > button to go to the WIRELESS settings

Using The First-Time Setup Wizard Wireless

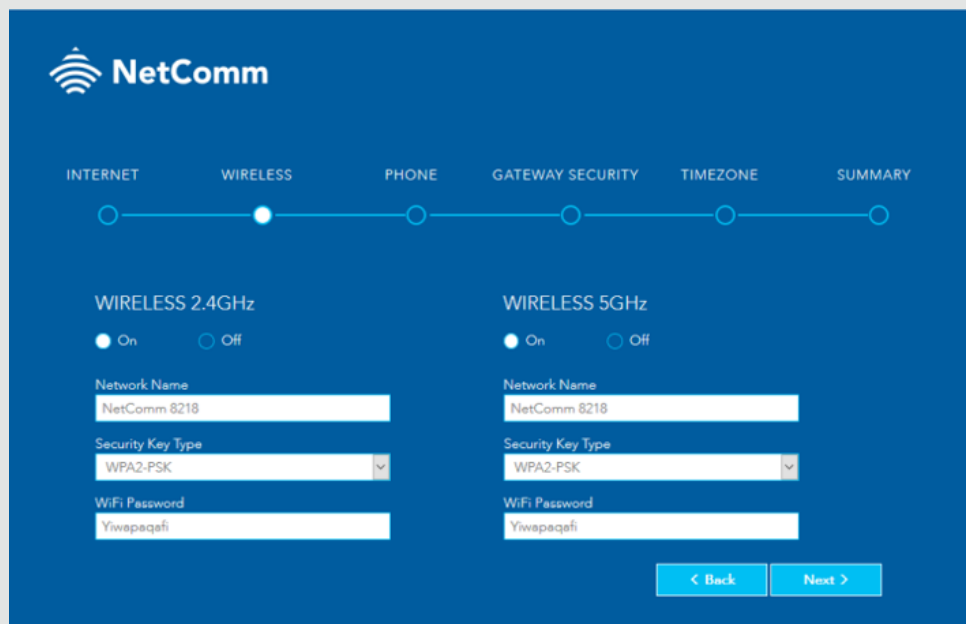

The screenshot shows the NetComm wireless setup wizard. At the top, there's a progress bar with six steps: INTERNET, WIRELESS (selected), PHONE, GATEWAY SECURITY, TIMEZONE, and SUMMARY. Below the progress bar, there are two columns for configuring wireless networks. The left column is for WIRELESS 2.4GHz and the right column is for WIRELESS 5GHz. Each column has a radio button to turn it On or Off. Below the radio buttons, there are three input fields: Network Name, Security Key Type (a dropdown menu), and WiFi Password. In the 2.4GHz section, the Network Name is 'NetComm 8218', the Security Key Type is 'WPA2-PSK', and the WiFi Password is 'Yiwapeqafi'. In the 5GHz section, the Network Name is 'NetComm 8218', the Security Key Type is 'WPA2-PSK', and the WiFi Password is 'Yiwapeqafi'. At the bottom right of the form, there are two buttons: '< Back' and 'Next >'.

FOR A SEAMLESS WIFI EXPERIENCE

Please keep the same Network Names and WiFi Passwords for both the 2.4Ghz and 5Ghz networks settings.

1. On this page

You can configure the wireless networks of the gateway, Enter the **Network Name** (the name displayed on client devices when they scan for wireless networks), the **Security Key Type** (encryption type) and the **WiFi password**.

2. When you have finished

click the **Next >** button.

Using The First-Time Setup Wizard Phone



The screenshot shows the NetComm first-time setup wizard. At the top, the NetComm logo is displayed. Below it, a progress bar indicates the current step is 'PHONE', with other steps being 'INTERNET', 'WIRELESS', 'GATEWAY SECURITY', 'TIMEZONE', and 'SUMMARY'. A note states: 'Note: Configuration of a telephone is optional. If you do not intend to use a telephone handset with your router, click the Next button below to skip this section.' The main area is divided into two columns for 'PHONE LINE 1' and 'PHONE LINE 2'. Each column contains input fields for: Phone Number, SIP Username, SIP Password, SIP Proxy Server, SIP Registrar Server, and SIP Outbound Proxy *. At the bottom right, there are two buttons: '< Back' and 'Next >'. A footnote at the bottom center reads: '* Optional field, leave blank if you don't have this information.'


1. Configuration of VoIP telephone is optional

If you do not intend to use a telephone handset with the gateway, click the **Next >** button to skip this section

2. To configure a telephone

Enter the details into the fields shown for each line you wish to use. If you do not know the values to enter, contact **More**. click the **Next >** button when you have finished.

Using The First-Time Setup Wizard Gateway Security

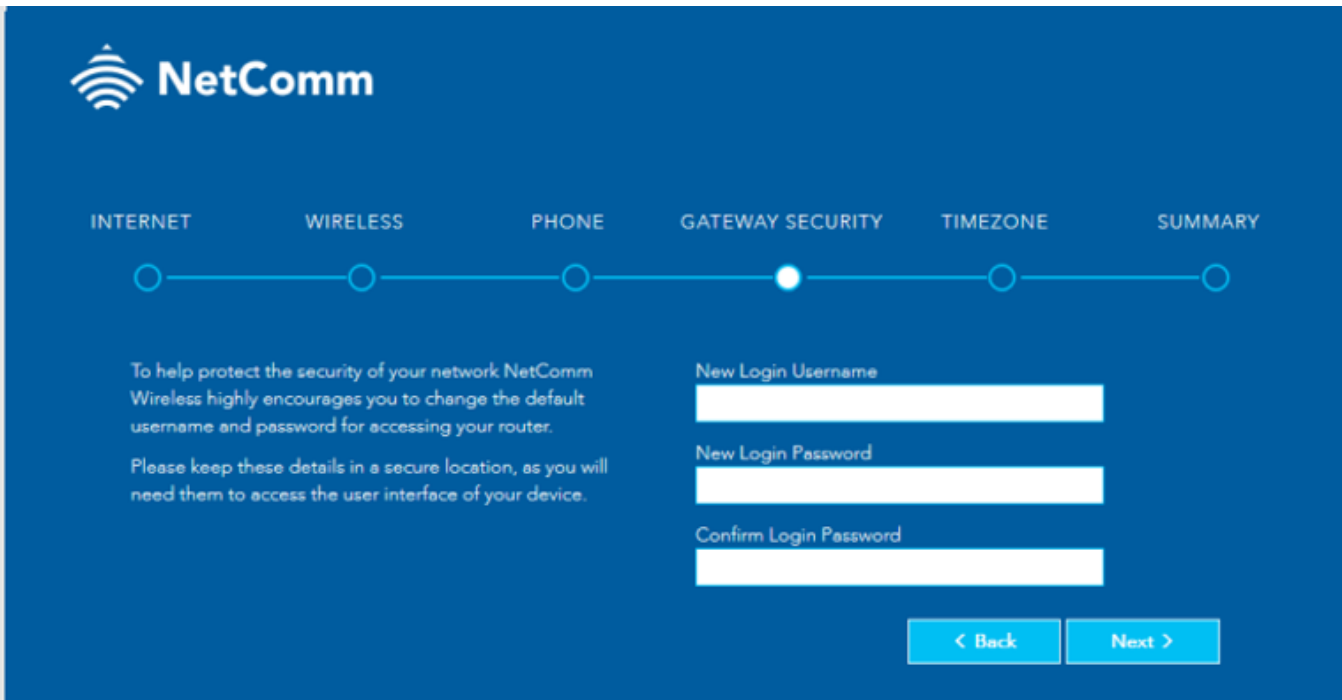

The screenshot shows the NetComm Gateway Security Setup Wizard. At the top is the NetComm logo. Below it is a progress bar with six steps: INTERNET, WIRELESS, PHONE, GATEWAY SECURITY (highlighted with a white dot), TIMEZONE, and SUMMARY. The main content area has a blue background. On the left, there is instructional text: 'To help protect the security of your network NetComm Wireless highly encourages you to change the default username and password for accessing your router. Please keep these details in a secure location, as you will need them to access the user interface of your device.' On the right, there are three input fields: 'New Login Username', 'New Login Password', and 'Confirm Login Password'. At the bottom right, there are two buttons: '< Back' and 'Next >'.

1. We highly recommend

 
that you configure a new username and password to access the gateway.

2. Usernames and passwords are case sensitive

can be up to 16 characters in length and may comprise letters, special characters and numbers without spaces.

When you have finished entering the new credentials, click the **Next >** button.

Using The First-Time Setup Wizard Timezone

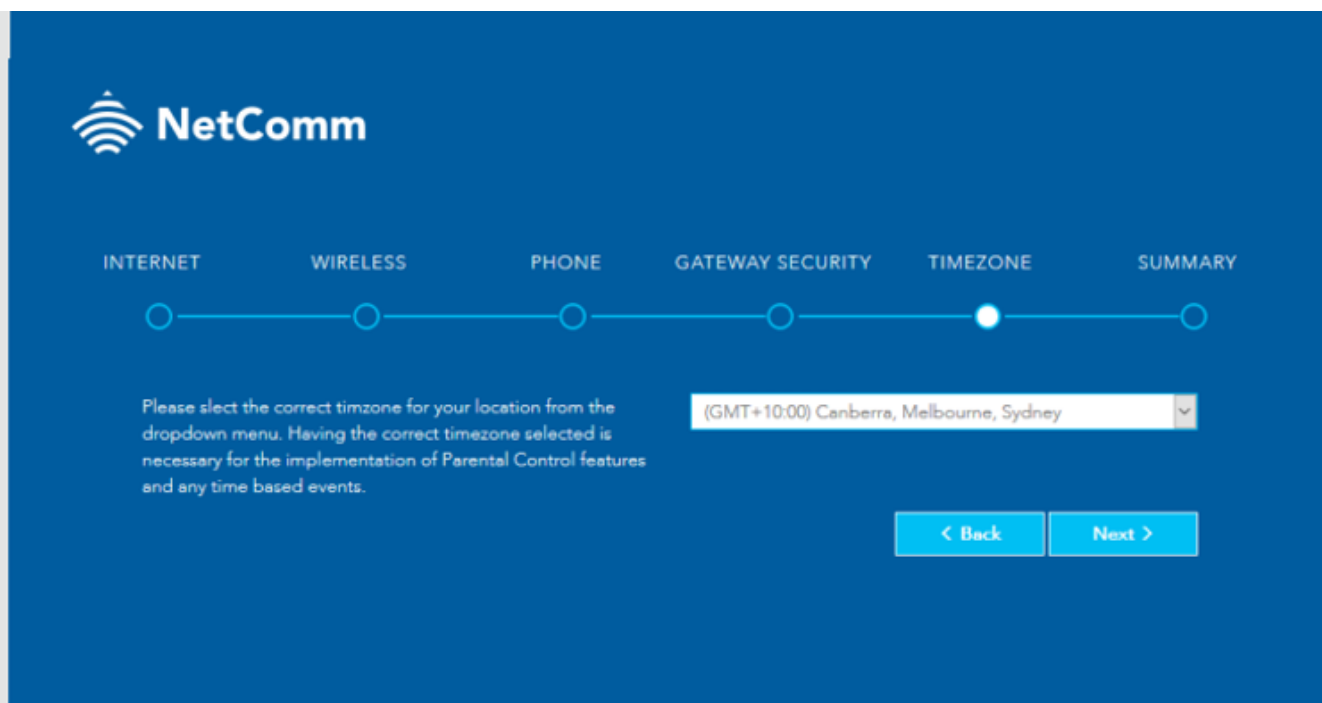

1. Specify the timezone

where the gateway is located for correct time keeping and the log-keeping function of the gateway.

2. Click the Next > button

when you have chosen the correct timezone.

Using The First-Time Setup Wizard Summary



1. The wizard displays a summary of the entered information

Check that the details are correct. If they are correct, click the **Finish >** button.

If they are not, click the **< Back** button to go back to the relevant screen to make changes.

2. When you click the Finish > button

the gateway returns you to the **SUMMARY** page.